



UX-1 Thunderbolt™ 3 Cinema Dock

Reader Module Service Guide



Specifications are subject to change without further notice.

All trademarks, trade names and copyrights are properties of their respective owners.

Thunderbolt and the Thunderbolt logo are trademarks of Intel Corporation in the U.S. and/or other countries.

Removing Top Cover

****Please Power off UX-1 and remove Power Cable from UX-1. Use ESD Glove to protect sensitive electronics during assembly.****

1. Locate the Top Cover Screw of the UX-1.



Top Cover Screw


Removing Top Cover

2. Use a Phillips Screwdriver and loosen and remove the top cover screw.




Removing Top Cover

3. Push and Lift top cover from housing.

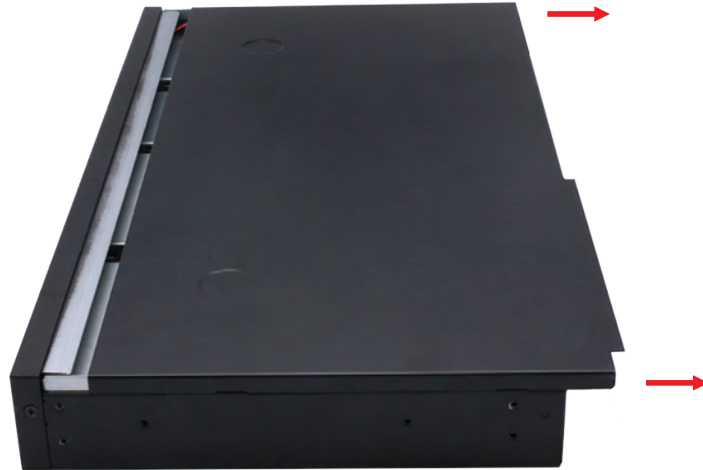

Removing Reader Module



4. Locate Reader Module that you will be servicing or swapping.
5. Locate the 2 x Screws from reader module.

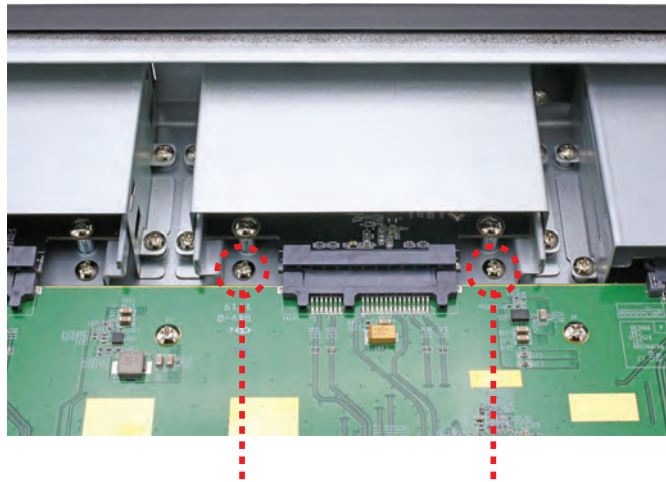

Reader Module Screws


Removing Reader Module

6. Loosen and remove the 2 x Screws from reader module with Phillips Screwdriver.

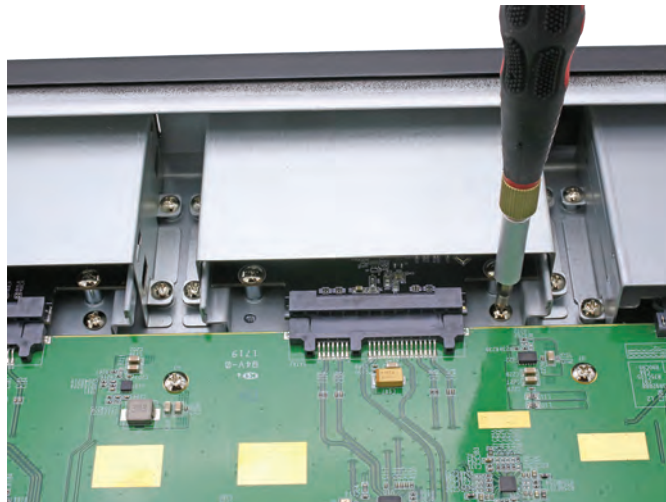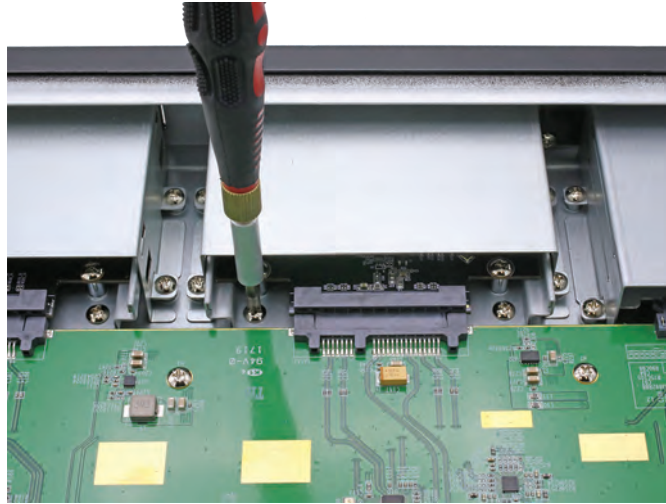


Removing Reader Module

7. Locate the Reader Module connector.

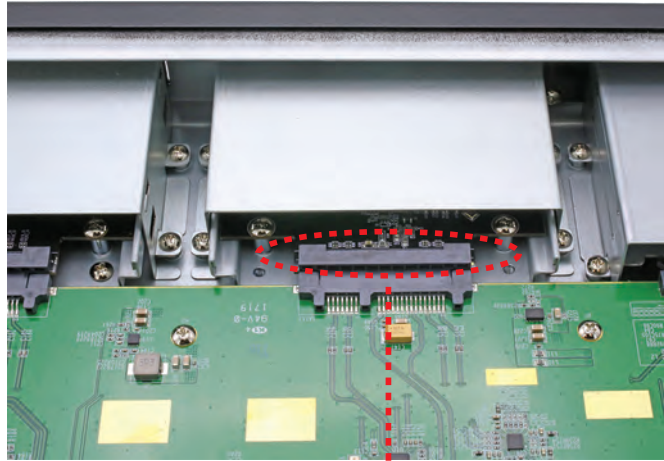

Reader Module Connector

8. Push the connector and the Reader Module will disconnect from main board.

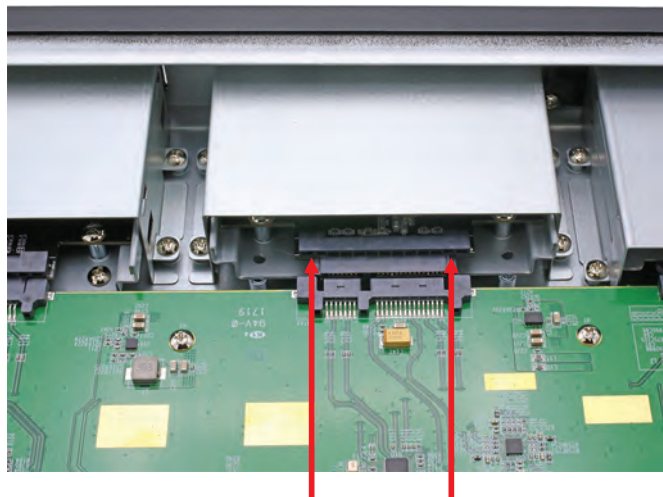

Push Reader Module Connector

Removing Reader Module

9. Locate the ejected Reader Module and remove from the UX-1.






Installing Reader Module

1. Locate the new Reader Module and insert into the UX-1.



Installing Reader Module

2. Install and tighten the 2 x Screws with Phillips Screwdriver to secure reader module.

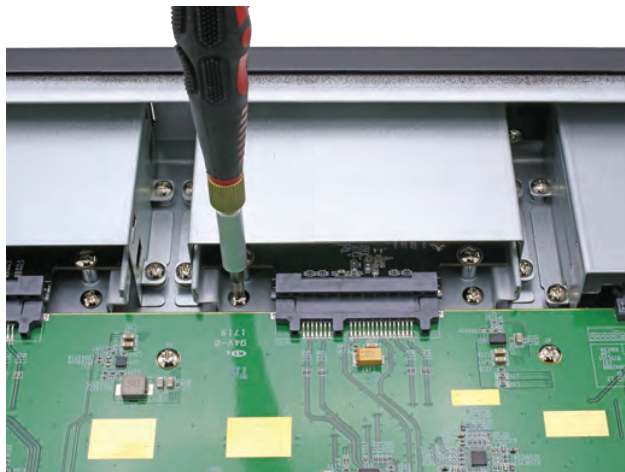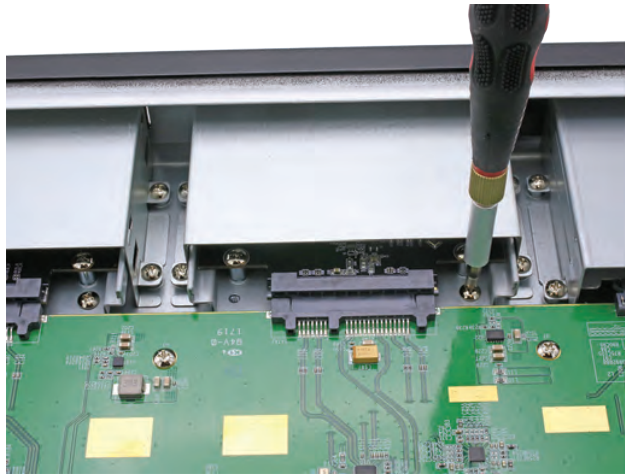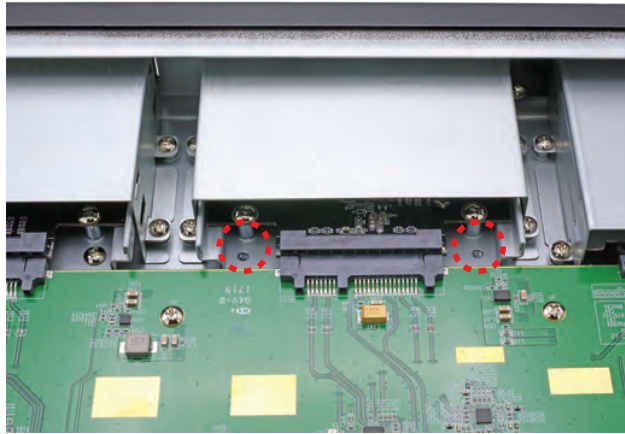

Install Top Cover

1. Place Top Cover back onto UX-1 housing.



Securing Top Cover

1. Use a Phillips Screwdriver and Tighten the screw to secure the top cover.



Hardware Setup

1. Your UX-1 is now ready to be setup.
For more details please refer to the UX-1 User's Guide.



Atech Flash Technology, Inc.