



# UNINSTALLING WINDOWS 7 ICON DRIVER

To uninstall the Driver, please follow these steps.



1. Go to **Start** menu, then locate **Control Panel**. Double-click on **Program and Features**.

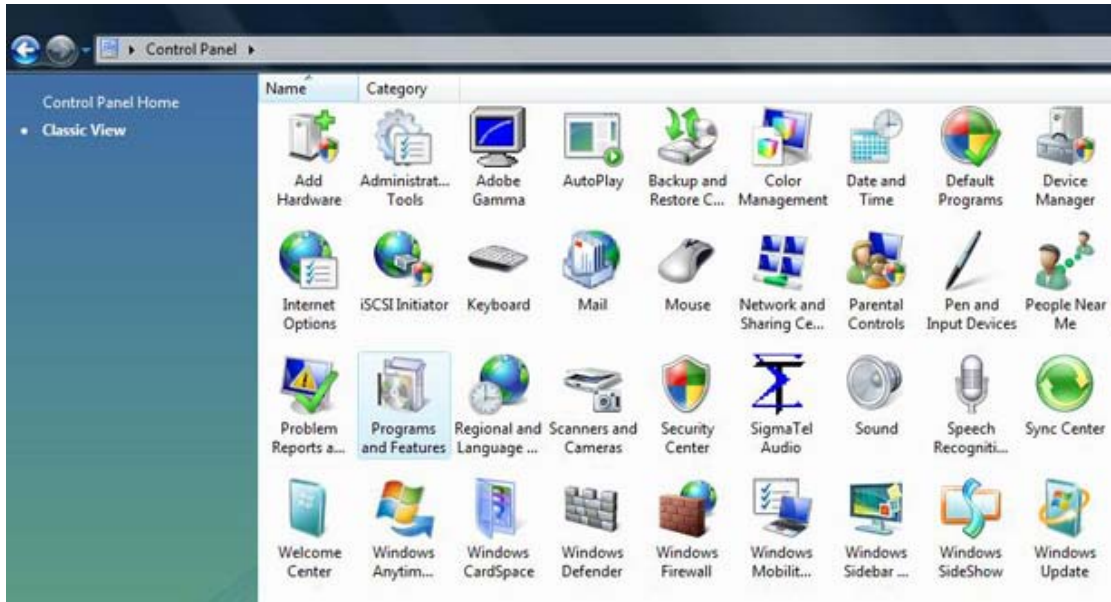

2. Click on **Atech Flash Driver....**

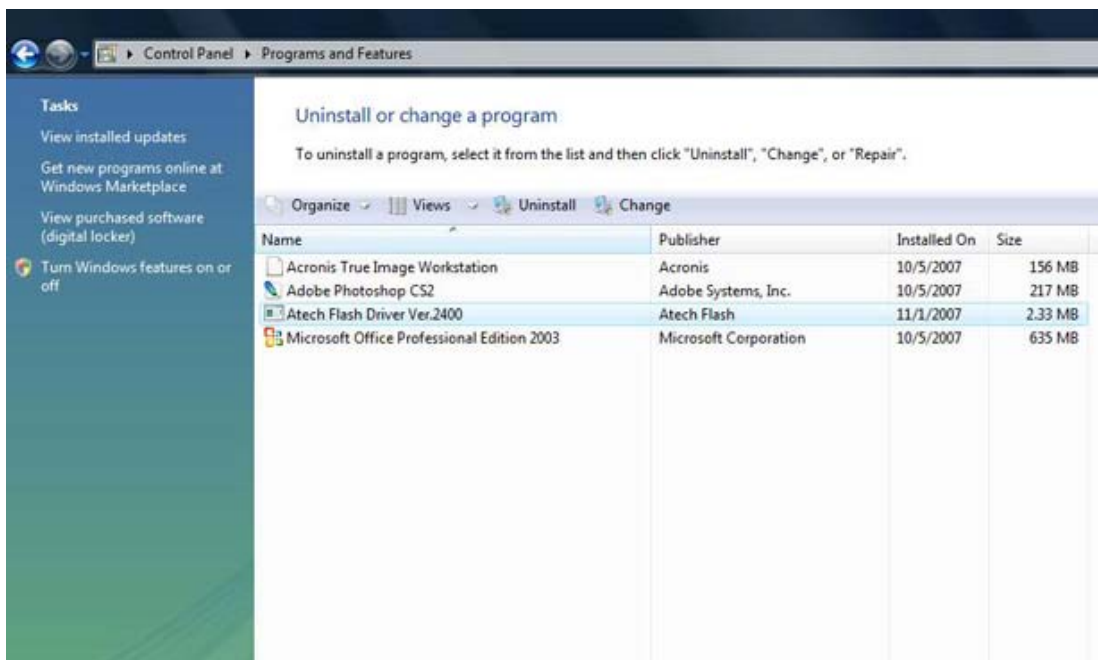

3. Follow the instructions provided by the **InstallShield Wizard**.

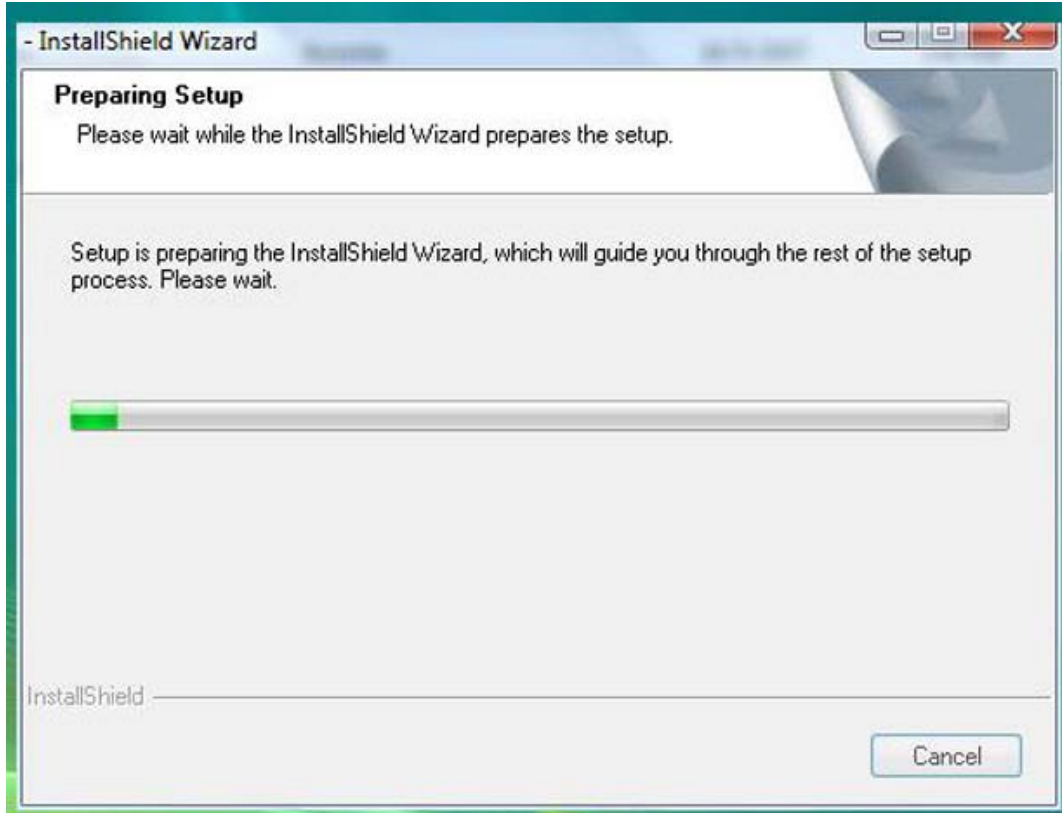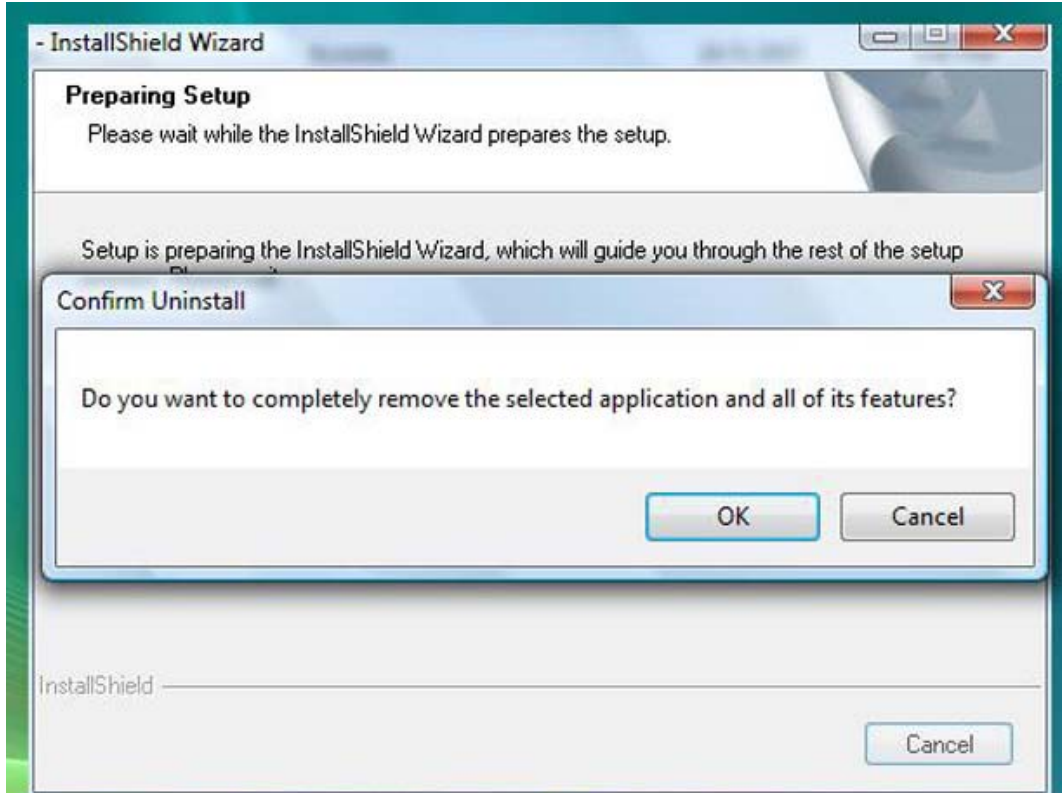

4. After the driver is **Uninstalled**, it is recommended to **Unplug** the reader and **Restart** your computer to completely remove the driver from your system.

